



Konica Minolta Secure Print

- Print the document that you want to secure print
- 2. Click Printer Properties (or Properties)

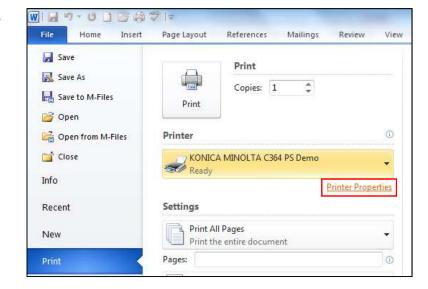


- 3. Click Output Method
- 4. Click Secure Print

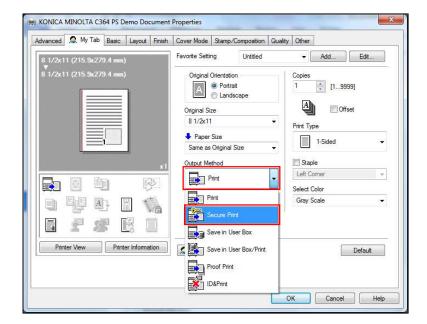




Konica Minolta Secure Print

- 5. In the new window type an **ID** of your choice in **Secure Print ID**
- 6. Type a password of your choice in Password
- 7. Click OK
- 8. Change the settings to match your print needs
- 9. Click OK when finished
- 10. Click Print

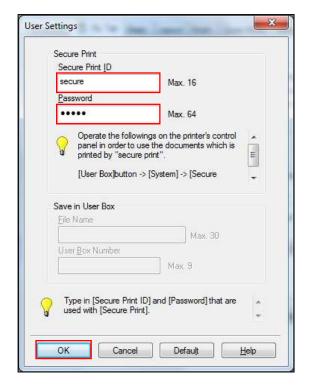

- 11. Go to the copier
- 12. Touch the **Menu** button (upper right corner)
- 13. Touch Secure Print

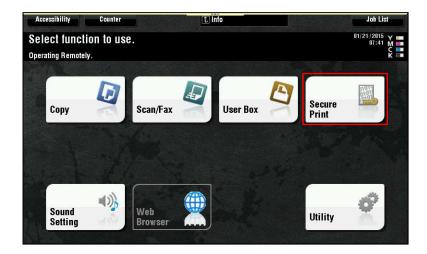



Konica Minolta Secure Print

- 14. Type in the **Document ID** that you entered in the print driver (in this case, Secure)
- 15. Touch Password
- 16. Type in the password for the **'Secure Print Document'**
- 17. Touch **OK**



- 18. Select the document by touching the Thumbnail
- 19. Touch **Print** (If necessary, the print conditions can be changed)
- 20. Touch the **Start** key in the control panel (To cancel printing the job, touch **Cancel**)

The document will print

