

Lexmark Remove Fax Shortcut on Home Page

1. Touch Shortcut Center



- 2. Touch Fax on the left
- 3. Touch the **three dots** on the right
- 4. Touch Remove from home screen

You'll no longer see the shortcut on the home page

